

GETTING STARTED – QUICK GUIDE – AUDIO 10 – MF 2910

CODE

When the radio is first turned-on, “code” will display. To enter the code, rotate the right-hand knob until the correct number displays in the prompted location, then push & release the right-hand knob to confirm. The prompt will move to the next position; repeat the process until the prompt is again at position #1, then push and hold the right-hand knob until the radio turns on.

Use care, you are allowed three attempts before the unit locks up for approx. 30 minutes.

STATION PRE-SETS

Use the tuning arrows to locate desired station. To enter the station into a pre-set location, push & hold the right-hand knob, notice the pre-set address will display and blink, release the knob and rotate it to change pre-set number address. The addresses are 0 through 9. When the display indicates the desired number location, press and hold the right-hand knob for two seconds. When set, the radio will beep.

To access a pre-set station, rotate the tuning knob until the desired pre-set number is displayed. The tuner will change to that station.

TONE/BALANCE/FADER

Push the tone button to select the option. Rotate the tuning knob to desired value. Push tuning knob to confirm. All settings can be reset to 0 by pushing and holding the tone button.

RDM & RPT (Random & Repeat)

To select random or repeat in the CD mode, push and hold the right hand knob while rotating to the left or right. The different options – random, repeat, off – will display. When the desired option displays, release the knob then push & release again to set.

SC SCAN

The SC button scans the tuner/CD player through available stations/tracks, stopping at each for approx 5-seconds. When at desired station/track, push SC again.

RDS RADIO DATA SYSTEM

Enables receiver to display text messages that many stations include with their broadcast signal. The RDS feature will not work if stations do not broadcast the RDS signal. Press the RDS button to turn feature on/off.

PTY

“Program Type” With the radio in RDS mode and tuned to an RDS station, push the PTY button to see the program type, i.e., Rock, Talk, Jazz, Weather, News, etc., etc.

FM & AM/LW/SW

FM Selects the FM band. AM selects AM band. Repeatedly pushing AM will scroll through additional bands: LW & SW.

CD

Selects the single CD player.

CDC

Selects the remote CD changer.

CURVED ARROW

Ejects the single CD.

TELEPHONE AUDIO MUTING

When a Mercedes phone is installed and its muting switch is connected to the car radio (standard), the radio will be muted and the display will show “PHONE” when the telephone is used.

SPEAKER MUTE BUTTON

The speaker mute button is meant to work with “TP” - Traffic Program function which is available only in a few areas of the USA. It is not a manual mute feature.

NOTE: For more detail, see the Owner’s Manual.